

COMMANDER

P.O. BOX 3090 ALBANY, GEORGIA 31706-3090 PHONE 229/883-1440 FAX 229/439-9790

Service Letter No. SL-AG-32 April 20, 1964

SUBJECT: Change of Position of Ground Wire Attachment

To Ignition Switch (Bendix – Scintilla, Navy Type A-la)

APPLICABILITY: S-2A, S-2B & S-2C models,

Serial No. 1002A thru 1201C

FAA APPROVED

In order to avoid the possibility of having a hot mag when the switch is in the "OFF" position it is recommended to change the ground wire attachment to the ignition switch. The following steps should be taken:

- 1. Dismount the ignition switch from the instrument panel (4 screws).
- 2. Open the housing by removing 2 nuts at the rear.
- 3. Disconnect ground wire at point B and attach under bolt as shown in sketch.
- 4. Close housing.
- 5. Reseal wire outlet hole with electrical tape.
- 6. Reconnect ignition switch in panel.

Page aog 2

